

## Function

Prevents damage to doors and  
jambs


## Specifications

Fits all interior and exterior pre-hung  
doors with 2 1/8"-3" cross and  
1" edge bore




# Lock Strap

1-800-568-7423 Ext 157

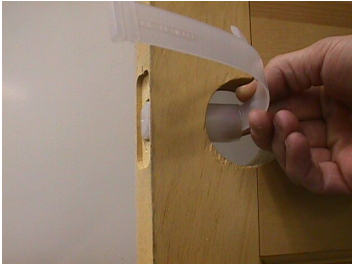

## 1. Insert Barrel into Bolt Bore

End of barrel will extend into the strike bore acting as a deadbolt.

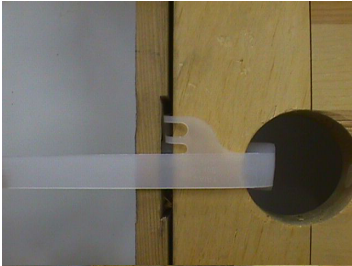

## 2. Insert Spacer between Door and Jamb

Does not get removed until unit is in the rough opening. Keeps perfect spacing between door and jamb.



## 3. Pull Strap Tight and Staple to Backside of Jamb

No holes in door and jamb to be puttied later.

## A one-cent nail sounds cheap. Think again!

- The nail can loosen allowing components to rattle, ultimately resulting in the unit coming apart and damaging the door and frame.
- Nailing the door causes holes, which will later require puttying and sanding by the customer.
- Removal of the nail may result in pulling the jamb loose.
- The nail must be removed before placing the door in the rough opening. Wrestling the door into place will destroy crucial spacing.
- If the nail is mistakenly left in, the door must be removed from the wall for the nail to be removed, and then re-installed.

# Lock Strap